

**CHECKLIST OF COMPONENTS**





**HELPFUL HINTS:**

- Fitting the Stripclad & Sturdyclad Systems is a relatively simple DIY task that most people have no problems with. Clad & Clean recommend a careful double check on all dimensions before actually starting the installation.
- Clad & Clean ceiling planks are easily fastened in place. They may be simply pinned or screwed. It depends entirely on the nature of the premises and how frequently it will require washing etc.

**GUIDE TO FITTING**

**1 Fix laths all round the edge of the room**, flat to the ceiling and wall (where ceiling meets walls). Then fasten the laths to the existing purlins, make sure that they are 40cm or 60cm centres AND AT RIGHT ANGLES TO THE WAY YOUR CLAD & CLEAN PANELLING IS TO BE INSTALLED




**2 Install the Clad & Clean Edging Strip.**


This is fastened all round each edge, where ceiling meets a wall. Fasten with screws or pins.

**3 Installing the First Panel.**

Remember which way you are fitting your panels. Carefully measure from inside the edging strip to the inside of the facing edging strip (see A-B on diagram) and deduct 2cm from this. **CUT YOUR FIRST PANEL TO THIS LENGTH.**



Insert the cut panel into the edging frame, use a pallet knife to gently lift the edging strip. Gradually work the panel into place until it is seated in place on three edges. Fasten panel to laths as described earlier, ensure fixing edge is nearest ceiling so pins/screws etc. are not visible when next panel is pushed into position.




**4 Remaining Panels.**

Measure next panel (deducting 2cm) and simply push into place, fixing as described above. Ensure each panel size is carefully measured as described in 3) above.

**5 Last Panel.**

Prior to measuring the last panel, fasten the panel just fitted along the fixing edge. Measure for length as described in 3) above & cut to size.

Next measure for width, from the facing edge of the last fixed panel to the inside of the Edging Track. Take this measurement at intervals and allow for variations. Transfer measurement/s to panel and cut along the length. Fit into Edge Track then push back to join into existing panel.

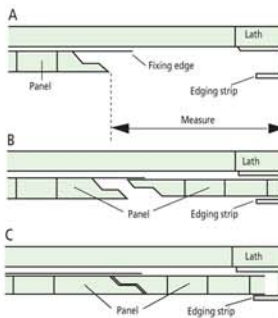

**EXTRA NOTE:** You can add coving to your ceiling for that 'ultimate' professional finish. See our price list for details.

**FITTING INSTRUCTIONS FOR STRIP-CLAD & STURDYCLAD CEILING SYSTEMS**



For more information ring now-

Tel : 01274 653777

**CLAD & CLEAN**

**Hygenic**  
INSTALLATIONS

Hygenic House,  
B12 - B13 Headway Business Centre  
Knowles Lane, Dudley Hill  
Bradford, BD4 9SW

Tel : 01274 653777

Fax: 01274 653888

Visit our Website at: [www.hygenic.co.uk](http://www.hygenic.co.uk)  
ALL INFORMATION CORRECT AT TIME OF GOING TO PRESS

...WHEN THERE'S JUST NO ROOM TO COMPROMISE